



Compatible Generator Guide

The Following is a list of generators from various manufacturers. The GenerLink transfer switch requires a generator that outputs 120/240 Volts and has either an L14-30 or L14-20 receptacle. The Generlink is shipped with a 20 foot cord, although longer cords are available.

**NOTE: GenerLink must be used with a generator with a floating neutral.
For use with a Honda EB Series generator SEE HONDA SERVICE BULLETING #20.**

| Manufacturer | Model Number | Wattage | Plug Type | GenerLink Compatible | Notes: |
|-------------------|---------------|---------|-----------|----------------------|-----------------------------------|
| Briggs & Stratton | BS1932 | 4000 | L14-20R | Yes | |
| Briggs & Stratton | BS1933 | 6500 | L14-30 | Yes | |
| Briggs & Stratton | BS1934 | 8000 | L14-30 | Yes | |
| Briggs & Stratton | BS1894 | 7000 | L14-30 | Yes | |
| Briggs & Stratton | BS30211 | 6200 | L14-30 | Yes | |
| Briggs & Stratton | BS30208 | 3500 | L14-20 | Yes | |
| Coleman Powermate | COPM052530203 | 5000 | L14-30 | Yes | |
| Coleman Powermate | COPM052531217 | 5000 | L14-30 | Yes | |
| Coleman Powermate | COPM0545003 | 5000 | L14-20 | Yes | |
| Coleman Powermate | COPM054500417 | 5000 | L14-20 | Yes | |
| Coleman Powermate | COPM054500401 | 5000 | L14-20 | Yes | |
| Coleman Powermate | COPM049650417 | 6500 | L14-20 | Yes | |
| Coleman Powermate | PM0434600 | 4600 | L14-20 | Yes | |
| Coleman Powermate | PM0603250 | 3250 | 110 Volt | No | |
| Coleman Powermate | PM0525300 | 5500 | L14-20 | Yes | |
| Coleman Powermate | RPM0535000 | 5000 | L14-20 | Yes | |
| Coleman Powermate | RPM0545007 | 5000 | L14-20 | Yes | |
| Coleman Powermate | RPM052500 | 5500 | L14-20 | Yes | |
| Coleman Powermate | RPM05525312 | 5000 | L14-20 | Yes | |
| Coleman Powermate | PM0463300.01 | 3250 | L14-20 | Yes | |
| Coleman Powermate | PM0535000 | 5000 | L14-20 | Yes | |
| Coleman Powermate | RPM064700 | 7000 | L14-20 | Yes | |
| Coleman Powermate | PMA505622 | 5000 | L14-20 | Yes | |
| Coleman Powermate | PM0495503 | 5500 | L14-20 | Yes | |
| Coleman Powermate | PM0605000 | 5000 | L14-30 | Yes | |
| Coleman Powermate | PM0606500 | 6500 | L14-30 | Yes | |
| Coleman Powermate | PMO497000 | 7000 | L14-30 | Yes | |
| Coleman Powermate | COPM0601100 | 11,000 | L14-50R | No | Yes with 50 amp to 30 amp adaptor |
| DeWalt | DWDG4300 | 3800 | L14-20 | Yes | |
| DeWalt | DWDG6000 | 5000 | L14-30 | Yes | |
| DeWalt | DWDG6000E | 5000 | L14-30 | Yes | E = Electric Start |

| | | | | | |
|-----------------------|-------------------------|--------|----------|-----|--------------------|
| DeWalt | DWDG7000 | 6000 | L14-30 | Yes | |
| DeWalt | DWDG7000E | 6000 | L14-30 | Yes | E = Electric Start |
| Generac | BS9777 | 4000 | L14-20R | Yes | |
| Generac | BS1669 | 5000 | L14-20R | Yes | |
| Generac | BS1654 | 5500 | L14-30 | Yes | |
| Generac | BS9801 | 10000 | L14-30 | Yes | |
| Guardian Ultra Source | 004451 (12,500 Watt) | 12,500 | L14-30 | Yes | |
| Guardian Ultra Source | 004582 (15,000 Watt) | 15,000 | L14-30 | Yes | |
| Honda | EB5000i | 4500 | L14-30 | Yes | |
| Honda | EB7000i | 5500 | L14-30 | Yes | |
| Honda | EB 11000 | 9500 | L14-30 | Yes | |
| Honda | EG 3500 | 3000 | L14-20 | Yes | |
| Honda | EG 5000 | 4500 | L14-30 | Yes | |
| Honda | EM 3500X | 3000 | L14-20 | Yes | |
| Honda | EM3800S | 3300 | L14-30 | Yes | |
| Honda | EM5000IS | 4500 | L14-30 | Yes | |
| Honda | EM 6000 | 5000 | L14-30 | Yes | |
| Honda | EM6500S | 5500 | L14-30 | Yes | |
| Honda | EM7000IS | 5500 | L14-30 | Yes | |
| Honda | ES 6500 | 6000 | L14-30 | Yes | |
| Honda | EX 4500 | 4000 | L14-30 | Yes | |
| Honda | EX 5500 | 5000 | L14-30 | Yes | |
| Honda | EB 12 D | 10000 | L14-30 | Yes | Has Bonded Neutral |
| Honda | EB 3800 | 3000 | L14-20 | Yes | Has Bonded Neutral |
| Honda | EG 3500 | 3000 | L14-20 | Yes | Has Bonded Neutral |
| Honda | EB 5000 | 4500 | L14-30 | Yes | Has Bonded Neutral |
| Honda | EG 5000 | 4500 | L14-30 | Yes | Has Bonded Neutral |
| Honda | EB 6500 | 5500 | L14-30 | Yes | Has Bonded Neutral |
| Honda | EB11000 | 9500 | L14-30 | Yes | Has Bonded Neutral |
| Honda | EB12DAG | 10000 | L14-30 | Yes | Has Bonded Neutral |
| Honda | EB3500 | 3000 | L14-20 | Yes | Has Bonded Neutral |
| Honda | EB3500XK1 | 3000 | L14-20 | Yes | Has Bonded Neutral |
| Honda | EG5000XK1 | 4500 | L14-30 | Yes | |
| Honda | EM3000 | 2800 | L14-20 | Yes | |
| Honda | EM3500X | 2800 | L14-20 | Yes | |
| Honda | EM3500XK1 | 2800 | L14-20 | Yes | |
| Honda | EM4000 | 3800 | L14-20 | Yes | |
| Honda | EM5000SX | 4500 | L14-30 | Yes | |
| Honda | EM5000X | 4500 | L14-30 | Yes | |
| Honda | ES6500/K1/K2 | 6000 | L14-30 | Yes | |
| Honda | EMS4500 | 3600 | L14-20 | Yes | |
| Honda | EX3300S | 3000 | L14-20 | Yes | |
| Honda | EX3300SK1 | 3000 | L14-20 | Yes | |
| Honda | EX4500/SK1 | 4000 | L14-30 | Yes | |
| Honda | EX5500/K1/K2 | 5000 | L14-30 | Yes | |
| Honda | EZ3500 | 3000 | L14-20 | Yes | |
| Honda | EZ5000 | 4500 | L14-20 | Yes | |
| Honda | PCH1000ISW | 10,000 | L14-30R | Yes | |
| Honda | PCH650ISW | 6,500 | L14-30R | Yes | |
| Honda | PCH450ISW | 4,500 | L14-20R | Yes | |
| Honda | PCCH350IS | 3,500 | L14-20R | Yes | |
| Honda | PCPH350IS | 3,500 | L 5-20 R | No | |

| | | | | | |
|-----------------------------|--------------------|--------|------------------------|-----|--------------------|
| Honda | PCPH350IS | 3,500 | I 5-20R | No | |
| Honda | PCH451CSW | 4,500 | 120/240 VAC Twist lock | | |
| Mitsubishi | MSMGE4800ROU | 4,100 | L14-30 | Yes | |
| Mitsubishi | MSMGE4800REU | 4,100 | L14-30 | Yes | |
| Mitsubishi | MSMGE5800ROU | 5,000 | L14-30 | Yes | |
| Mitsubishi | MSMGE5800REU | 5,000 | L14-30 | Yes | |
| Mitsubishi | MSMGE6700ROU | 5,800 | L14-30 | Yes | |
| Mitsubishi | MSMGE6700REU | 5,800 | L14-30 | Yes | |
| Mitsubishi | MSMGE12000REU | 9,500 | L14-30 | Yes | |
| Porter-Cable | PCH1000ISW | 10000 | L14-30 | Yes | |
| Porter-Cable | PCH650ISW | 6500 | L14-30 | Yes | |
| Porter-Cable | PCH450ISW | 4500 | L14-30 | Yes | |
| Porter-Cable | PCCH350IS | 3500 | L14-20 | Yes | |
| Porter-Cable | PCH451CSW | 4500 | L14-20 | Yes | |
| Porter-Cable | PCBSV750W | 7,500 | L14-30R | Yes | |
| Porter-Cable | PCBSI550W | 5,500 | L14-30 | Yes | |
| Porter-Cable | PCBSI525W | 5,250 | L14-30 | Yes | |
| Porter-Cable | PCGT5250WK | 5,250 | L14-30 | Yes | |
| RedHawk Electric Generators | ETDWG6LER | 3600 | L14-20 | Yes | |
| RedHawk Electric Generators | ETDG6LE | 6500 | L14-30 | Yes | |
| RedHawk Electric Generators | ETDG4LE | 4500 | L14-30 | Yes | |
| RedHawk Electric Generators | ETDG4LN | 3600 | L14-30 | Yes | |
| RedHawk Electric Generators | ETDG6LN | 3600 | L14-30 | Yes | |
| Robin Subaru | RGV4100(E) | 3000 | L14-20 | Yes | E = Electric Start |
| Robin Subaru | RG4300SI | 3800 | | No | L5-30R Plug |
| Robin Subaru | RGV6100(E) | 4800 | L14-20 | Yes | E = Electric Start |
| Robin Subaru | RGV7500 | 6000 | 120/240 | Yes | |
| Robin Subaru | RGV12100 | 10,000 | 120/240 | Yes | |
| Winco | WC5000H | 4500 | L14-30R | Yes | |
| Yamaha | EF 5200 DE | 4500 | 120 and 240 volt | Yes | |
| Yamaha | YG 6600 DE | 6000 | L14-30R | Yes | |
| Yamaha | EF4000DE | 3500 | 120 and 240 volt | Yes | |
| Yamaha | EF5200DE | 4500 | 121 and 240 volt | Yes | |
| Yamaha | EF6600DE | 6000 | L14-30R | Yes | |
| Yamaha | EF12000DE | 9500 | L14-30R | Yes | |
| Yamaha | YG4000D | 3500 | 121 and 240 volt | Yes | |
| Yamaha | YG5200D | 4500 | 120 and 240 volt | Yes | |
| Yamaha | YG 6600 D | 6000 | L14-30R | Yes | |
| Yamaha | Premium YG4000D | 3500 | No | | |
| Yamaha | Premium YG5200D | 4500 | 120 and 240 volt | Yes | |
| Yamaha | Premium YG6600D | 6000 | L14-30R | Yes | |
| Yamaha | Premium YG6600DE | 6000 | L14-30R | Yes | |
| Yamaha | Premium EF 2600 | 9500 | L14-30R | Yes | |
| Yamaha | Premium EF 4000 DE | 3500 | 120 and 240 volt | Yes | |
| Yamaha | Premium EF5200DE | 4500 | 120 and 240 volt | Yes | |
| Yamaha | Premium EF6600DE | 6000 | L14-30R | Yes | |
| Yamaha | Premium EF1200DE | 9500 | L14-30R | Yes | |
| Yamaha | Diesel EDL6500S | 6000 | L14-30R | Yes | |

225 Arnold Road, Lawrenceville, GA 30044 770.736.8232 Fax: 770.736.8231

www.globalpowerproducts.com www.generlink.com